Care & Maintenance

Looking after your Capral Product



Caring for your new Capral Aluminium product correctly should greatly enhance its life, appearance and functionality. Here we offer some easy to follow tips that should help to extend the life of your aluminium product.

Caring for your new Capral Aluminium product

Aluminium Windows and Doors

All external aluminium surfaces of windows and doors should be washed with clean water and a mild detergent at least every three months. A soft sponge or similar should be used to avoid scratching the glass or aluminium. In coastal or industrial areas where the environmental conditions are more demanding, the cleaning program should be carried out on a monthly basis.

Abrasive, chemical cleaners or steel wool should not be used as such methods may result in damage to the glass or aluminium surfaces. Drainage slots should be checked on a regular basis to ensure they have not become blocked with residual dirt or grime.

Awning/Casement Windows and French Doors

With sashes open, the sash and opening perimeter should be cleaned regularly and kept clear of dust and foreign



matter. All door and window operating hardware should be cleaned and operated regularly to ensure smooth operation. Lubricants should not be used on casement stays, as this will affect their operation.

Double Hung Windows

Window jamb tracks should be cleaned regularly and kept clear of dust and foreign matter. Window operating hardware should be cleaned and operated regularly. It is imperative that both top and bottom sashes are operated fully on a regular basis to ensure smooth operation

Sliding Windows and Sliding Doors

Sill recesses should be regularly cleaned and kept clear of dust and foreign matter. A brush and vacuum within the track area may be used to do this. Door locks should be checked from time to time for satisfactory operation and may require adjustment to compensate for building settlement.

Door rollers are factory set and should not require any adjustment. However, if due to building settlement, an adjustment needs to be made, the door panel must first be lifted to relieve weight from the roller assembly. Adjustment should be made using a Phillips head screwdriver.

Insect and Safety Screens

- Flyscreens can be cleaned by vacuuming or washing thoroughly using a soft brush.
- Clean screens 3 to 4 times per year.
- Add a small amount of mild detergent to a bucket of warm water.
- Carefully remove the screen.
- Hose the screen down thoroughly.
- Dip a soft nylon brush into the bucket of water and gently brush the screen.
- Hose down well.
- Allow the screen to dry before replacing in the window or door.

Hardware

Regular maintenance is required for all hardware, even stainless steel components, as they are moving parts. In most environments, maintenance is recommended every six (6) months and every three (3) months in marine and industrial environments.

Hangers, pivots and brackets should be given a light spray of corrosion preventative silicone based spray (such as CRC Marine 66 or Innox) followed by a light wipe with a dry cloth to remove excess. Exposed surfaces should be wiped down with warm soapy water and a soft rag and then rinsed clean before applying preventative. Visible surfaces of hinges

Maintenance Tip:

Abrasive-type cleaning agents (Ajax or similar) or other abrasive cleaning materials such as steel wool or the like, can severely damage aluminium surfaces and should be avoided. should be wiped down with warm soapy water on a soft rag and then rinsed off by wiping with a clean damp rag. Application of a thin film of light machine oil or one of the corrosion preventative sprays mentioned above will help to maintain the original lustre of the metal finish. Be careful not to get these compounds on the timber work itself as they may cause staining.

Drop bolts should be sprayed with a lubricant such as those mentioned above and the sliding pin inside the bolt and to the lock cylinder.

Glass

It is recommended that all glass surfaces be kept clean by prompt removal of all dirt or other contaminants. Clean water and, in some instances, a small amount of mild detergent should be used. After washing, any detergent residue must be thoroughly rinsed away with clean water.

Under no circumstances is any form of blade, scraper or abrasive cleaner to be used. Stubborn dirt or residue should be lightly sponged off to avoid scratching of the glass.

The frequency of cleaning required will depend on environmental conditions such as proximity to the ocean or industrial areas. As a general guide, glass should be cleaned at least quarterly.



Capral Limited ABN 78 004 213 692 | www.capral.com.au | 1300 366 517

